69码 产品型号 SKU编码 商品名称 S500 27105 小米电动剃须刀S500 港台分销合并版 6934177717185

安全須知

2. 請勿拆開機身更換電池;

7. 請勿自行改造、修理本產品。

5. 充電時, 請使用 5V 充電器;

. 本產品僅適合在室內使用;

有利於縫隙中的水分更快揮發:

**Product Overview** 

ndicators Travel Lock • • •

Clean/Error • 6 Battery Level -+100

2. 本產品僅供一人使用:

注意 1. 如果充電線損壞或者工作異常, 請停止使用;

3. 請將產品放置在兒童無法觸及的地方; 4. 充電時, 請確保充電口乾燥;

2. 若電源軟線損壞,必須使用專用軟線或者從

6. 如長時間放置不使用, 請至少每半年充滿電1次。

4. 請在5℃至35℃的溫度下充電、使用和存放刮鬍刀;

5. 為避免充電線受損, 請不要將充電線纏繞在產品」

3. 旅行攜帶時, 應確保保護蓋已蓋好、旅行鎖已上鎖, 以保護刮鬍刀;

6. 本刮鬍刀僅適用於臉上毛髮, 建議不要用於頭部或身體其他部位

必須在監護人的監督及指導下使用、清潔和維護本產品。

7. 本產品已通過 IPX7 防水測試, 可水洗或在水龍頭下進行清洗, 但請勿長時間浸泡在水中;

8. 在清潔過程中, 有水從外殼縫隙中滴落是正常現象, 而且沒有危險, 因

為所有的電子元件都封閉在內部獨立的防水部件中。直立放置刮鬍刀

Info Card Charging Cable

Charging Port

1. 將手持部分與電源軟線分開後, 才能在水中清洗手持部分;

3. 插拔充電插頭時,請勿直接拉拽充電線; 4. 請勿在無人照看的情況下長時間對產品充電,最長充電時間不要超過

5. 本產品內置充電電池,請勿將其投入火中,或者在高溫處充電、使用或





## Safety Instructions

All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such

製 造 商 : 舒可士 ( 深圳 ) 科技有限公司 要 6 簡: 舒可士 (深圳) 科技有限公司 (小米生態能企業) 製造商地址:深圳市南山區留仙大道3370號南山智園崇文園區2號樓 11樓 進口 商: 台灣小米通訊有限公司 造口商地址: 台北市中正區新生南路1段50號2樓之2 服務電話: 02-21921023 本產品售後服務請查詢官網: www.mi.com/tw/service (1) 下平均 经条出市经海出,位

(以下訊息僅香港市場適用) 服務電話: 852-30011888 本產品售後服務請查詢官網: www.mi.com/hk/service For further information, please go to www.mi.com Manufactured by: SOOCAS (Shenzhen) Technology Co., Ltd. (a Mi Ecosystem company) Address: Room 1101, 1102, 1103, 1104, 401 & 402, Building 2, Chongwen Area, Nanshan iPark, No. 3370 Liuxian Avenue, Nanshan District, Shenzhen, China

Always hold the plug when plugging in or unplugging the charging cable. Never directly pull the cable. 4. Do not charge this snaver for extended periods of time while leaving it unattended, and do not charge it longer than 24 hours.

5. This shaver contains a built-in rechargeable battery, and should never be exposed to fire, nor charged, used, or stored in high-temperature environments.

6. Do not place or insert any foreign objects into this shaver.

7. Do not modify or repair this shaver yourself.

8. Detach the hand-held part from the supply cord before cleaning it in water. mmediately stop using the charging cable if it is damaged or working improperly

1. If the charging cable is damaged, it must be replaced with a genuine charging cable is damaged, it must be replaced with a genuine charging cable purchased from the manufacturer or after-sales service department.

3. Keep this shaver out of reach of children.

4. Make sure the charging port is dry when charging.

5. Use a 5 V charger when charging.

6. Fully charge the shaver at least once every six months, if it will not be used for an extended period of time.

This shaver is intended for use by a single individual only.

When traveling, make sure to install the protective cover and enable the travel lock to protect the shaver.

t is recommended to charge, use, and store this shaver at temperatures etween 5°C to 35°C. between 5°C to 35°C.


Do not wrap the charging cable around the shaver to avoid damage to the cable.

Ch This shaver is only suitable for facial hair, and is not recommended to be used to shave one's head or other parts of the body.

This shaver meets the IPX7 standards for waterprofing and can be cleaned with water. However, it should not be immersed in water for an extended period of time.

B. It is normal for water to drip through the gaps of the body when rinsing the shaver. However, this poses no danger since all electronic components are enclosed in an independent waterproof compartment inside the shaver. Howarding it unright can help get rid of the water quickly.

B. This shaver is not intended for use by people (including children) with reduced physical, sensory, or mental capabilities, or a lack of experience and knowledge, unless they are under the supervision of or have been given instructions concerning the use of the shaver by a person responsible for their safety.

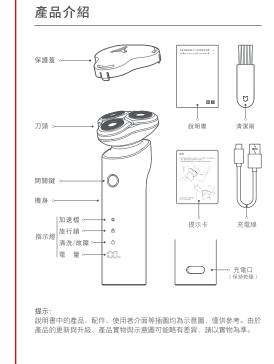


It is normal for the skin to be slightly irritated after the first few shaves It is recommended to regularly use the shaver (at least 3 times a week for 3 weeks to allow the skin to adapt as quickly as possible.

Apply gentle pressure while shaving your face in circular motions. It is not necessary to repeatedly shave the same area to achieve a clean

How to Use

Please check whether the shaving head and its blades are intact before use. Immediately stop using the shaver if the shaving head or its blades are damaged.

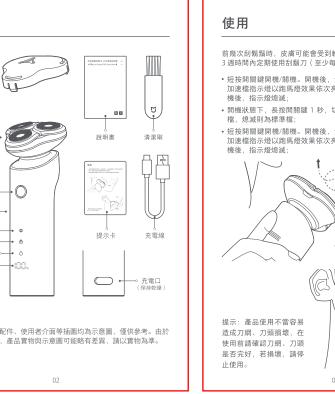

Travel lock

This shaver is equipped with a travel lock to prevent it from accidentally being turned on while it is inside the luggage.

Enabling the travel lock: When the shaver is turned off, press and hold the button for 3 seconds to enable the travel lock. Once it is enabled, the travel lock indicator will turn on for 3 seconds then go

on.

Disabling the travel lock: When the shaver's travel lock is enabled the travel lock and battery level indicators will blink if you press the button. To disable the travel lock, press and hold the button for 3 seconds. Then the travel lock and battery level indicators will blink and go off, and the shaver will turn on afterward.





Battery Level Indication

Indicator Status

Blinking slowly

Blinking
Unable to turn on
"actor Status



Cleaning & Maintenance

If the clean/error indicator blinks for 5 seconds and then goes off after turning on the shaver, please clean it for an optimal effect. The clean/error indicator will automatically blink for 5 seconds once every 3 minutes of use to remind the user to regularly clean the stubble buildup

I. Make sure the shaver is turned off and is not being charged befor

Remove the shaving head from the holder.



**Environmental Protection** 

Removing Battery:

dispose of, or recycle the built-in battery in accordance with local

Do not expose this shaver or its battery to fire to prevent the batter from exploding or releasing toxic and hazardous substances.

and remove the on/off button of the shaver. These parts cannot be

laws and regulations of the country or region it is used in.



2. Use a Phillips-head screwdriver to remove the screws on the bottom and release the inner compartment.

Charging Port: Type-C

Rated Input: 5 V === 1 A

Charging Time: Approx. 90 min

Specifications

Rated Voltage: 3.7 V

Rated Power: 3 W

IP Rating: IPX7



Troubleshooting

Unable to charge

Poor-quality shaving Poor-quality shaving head is clogged for worn out the charging cable to charge function for 3 seconds to disable for whatter, needs to be shaved for 3 seconds to disable for worn out the charging cable to charge for the charge for the charging cable to charge for the charge for the charging cable to charge for the char

Indicator light is in error or does not light up

Low battery, needs to be charge the shaver circuit board is do.

Circuit board is do.

Circuit board is do.

Irritated skin after shaving of worn out shaving lead. It takes a certain period of time for your skin to adapt to the shaver shave shaver.

The load on the motor is increased if the shaving head han't been cleaned for a long time.

The usage time is less than 60 minutes after being fully charged.

Shaver battery error

The load on the motor is repair.

Clean/error indicator blinks for 5 seconds lafter turning on the shaver shaven shaven

Circuit board is damaged Return the shaver to after-sales service for repair

Shaving head is damaged Replace with a genuin shaving head

Shaver is damaged Return the shaver after-sales service for re

Ambient temperature is too low/high to charge with a temperature between



Warranty Notice

person as Xiaomi may identify.

benefits which are in addition to, and not instead of, any legal

warranties provided by your national consumer law. The duration and conditions related to the legal warranties are provided by

respective local laws. For more information about the consume

otherwise promised by Xiaomi, the after-sales services shall be

limited to the country or region of the original purchase. Under the consumer warranty, to the fullest extent permitted by law, Xiaomi

will, at its discretion, repair, replace or refund your product. Normal

wear and tear, force majeure, abuse or damage caused by the user's negligence or fault are not warranted. The contact person for the

network, Xiaomi's authorized distributors or the final vendor who sold the products to you. If in doubt please contact the relevant

The present warranties do not apply in Hong Kong and Taiwan.

Products which were not duly imported and/or were not duly

r a Xiaomi's official seller are not covered by the present

from the non-official retailer who sold the product. Therefore,

# 付经纬 材质工艺要求

20200116

图纸提供单位

版本号

设计师

金东太空梭105G无光铜板纸

小米生态链产品包装图纸

舒可士(深圳)科技有限公司

 
米家电动剃须刀说明书

四色印刷+哑PP+啤切

不露杂色,套印误差≤ 0.1mm

颜色及 专色: Pantone Cool Gray 11 C

### 纹理要求





如有其它特殊要求,请写明

比例 1:1 单位 mm

