




Quick Start Guide

English


Table of Contents

1. Product & Parts.....	02
2. Assembly Guide.....	03
3. Folding & Unfolding.....	04
4. Charging.....	05
5. Handlebar & Button Guide.....	06
6. Dashboard.....	07
7. Riding Guide.....	08
8. Specifications.....	10


1. Product & Parts

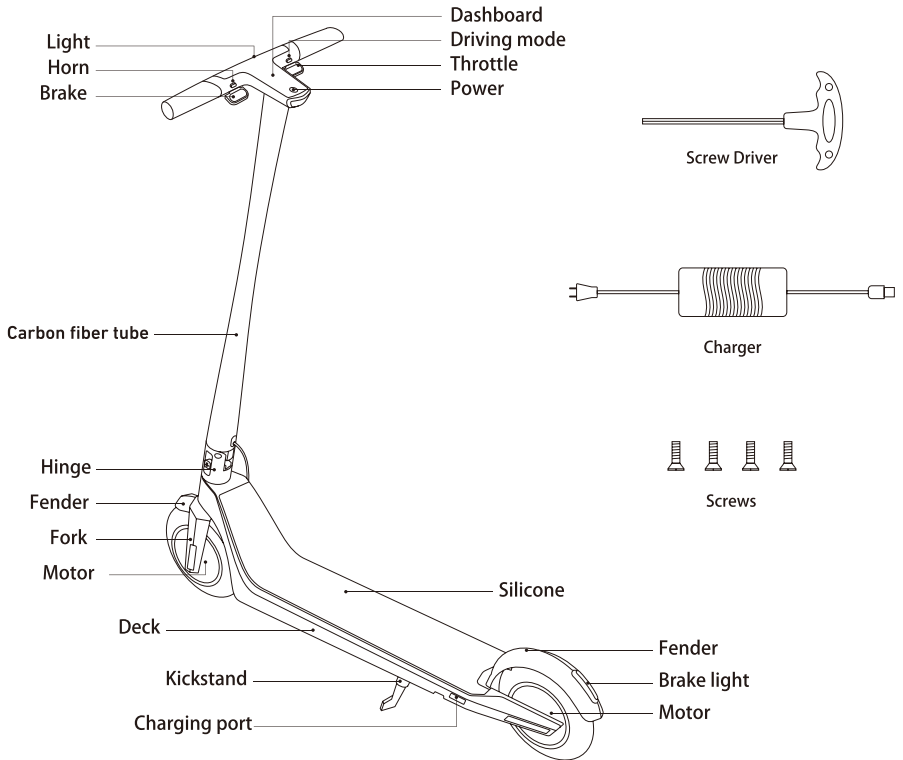


2. Assembly Guide

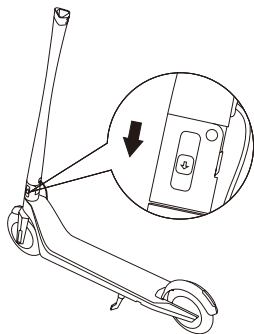


1. Press the hinge button down and fold the stem up.

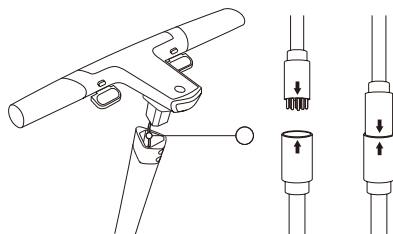

2. Connect handlebar and tube cable.

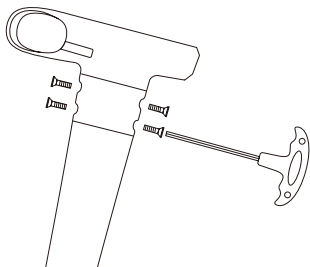


3. Use screwdriver to install handlebar screws.

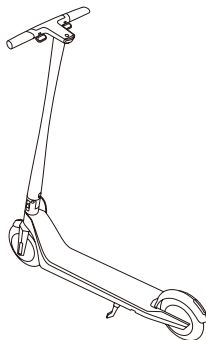


4. Turn power on.

3. Folding & Unfolding - Important trick to usage!

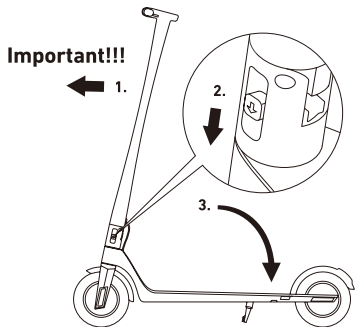


- 1. Important:** Push tube forward slightly.
2. Press hinge button down. **3.** Fold handlebar down.

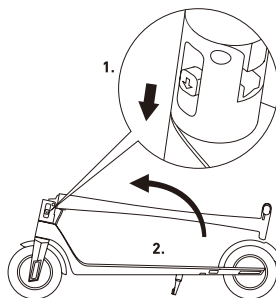


- 1.** Press hinge button down. **2.** Fold handlebar up.

4. Charging

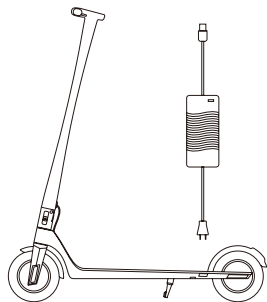


1. Plug in the charger.

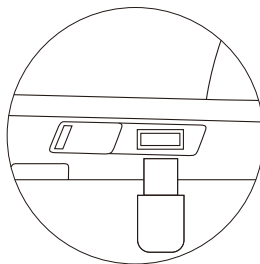

2. Open charge port cover and plug in.




3. Red light indicates charging.
Green light indicates full charge.

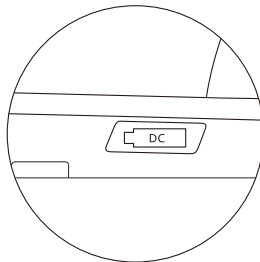

4. After charging, close charge port cover.

5. Handlebar & Button Guide

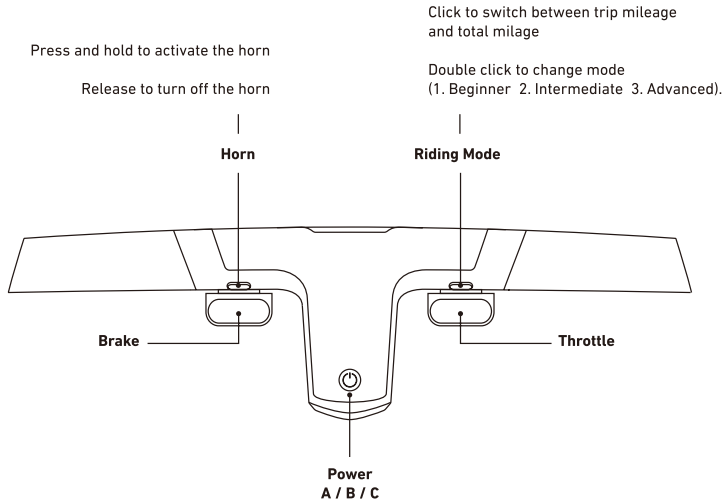


A Power (On/Off): Press and hold for 3 seconds. Motor will automatically turn off after 3 minutes if not in use.

B Light (On/Off): Click to activate or deactivate the light.

C Single/Dual Motor Mode: Press 2 times to alternate between single/dual motor mode. The dual motor icon will be displayed on screen when activated.

Odometer Units: To switch between miles and kilometers, simultaneously press and hold the Horn and Riding Mode buttons for 2 seconds.

6. Dashboard

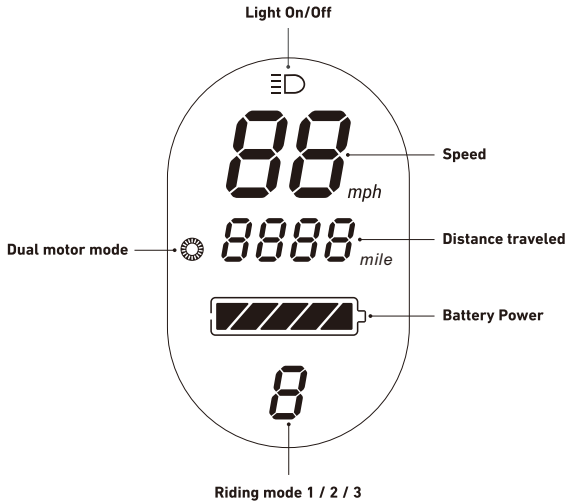

1

Beginner (Eco-mode)
Riding experience: soft and smooth
Maximum speed: 9.3mph


2

Intermediate (Standard mode)
Riding experience: balanced
Maximum speed: 12.4mph


3

Advanced mode (Sport mode)
Riding experience: a lot of power
Maximum speed: 15.5mph


7. Riding Guide

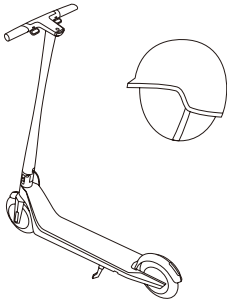


1. Please wear a helmet when riding. Check the dashboard after turning it on. We recommend Beginner mode (1) while getting use to your new scooter.

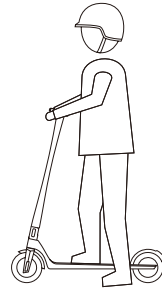

2. Start your ride on a flat surface, put one leg on the deck the other one on the ground. Push scooter forward to start.

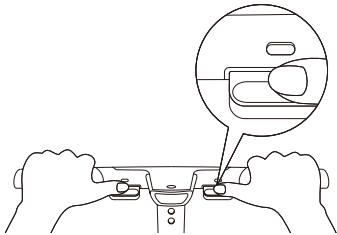


3. Put both feet on the deck after the scooter starts moving and gently apply the throttle.

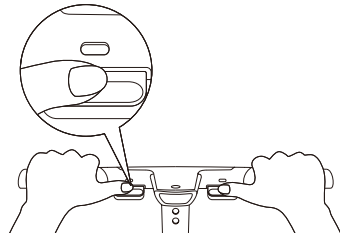

4. Brake when needed using the thumb lever as your primary brake. It activates the rear brake light. The rear fender step brake can be used as needed, but does not activate the brake light.

7. Riding Guide

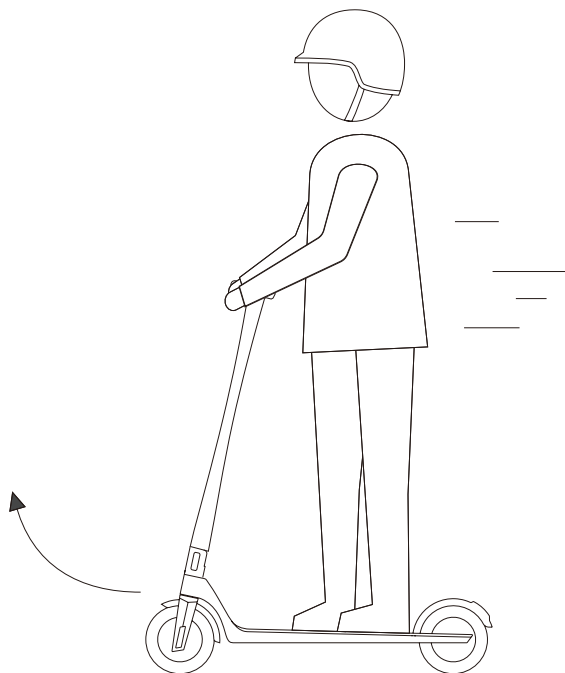

5. Slow down for turns, turning your body and handlebar slightly in the direction you want to turn.

8. Specifications

Product Information

Product Name / Model: E-Scooter / UNAGI E500
Vehicle Weight: 12.9kg
Vehicle Size: 110cm (Height) x 96cm (Length) x 42cm
Rider Limits: 35-100kg / Age 14+
Input Voltage / Current: 33.6Vdc / 2.0A
Max Speed: 25km/h
Battery Specifications: 28.8Vdc/9Ah
Capacity Charging Temperature Range: 0-40°C
Operating Temperature Range: -10-40°C
Charging Time: 4-5 Hours
IP Rating: IPX4

Battery Information

Type: Lithium Ion / 18650 Cells
Nominal Voltage: 28.8Vdc
Charging Voltage: 33.6Vdc
Rated Capacity: 9.0Ah / 259.2Wh
Intelligent BMS Temperature error / short circuit prevention
Under voltage / Over current protection
Over charge / discharger protection
Automatic sleep
Note: Not user serviceable

Charger Information

Manufacturer: Shenzhen Fuyuandian Power Co. Ltd
Model: FY-3362000
Input: 100-240V/AC 50/60Hz
Output: DC 33.6V 2A
Polarity: + center
Note: Only use the official charger supplied with the vehicle

Safety Warning

Please follow the instructions provided with the vehicle. Ride safely and under control at all times. Do not take your hands off the handlebar while in motion. Always wear a helmet and obey local traffic laws.

WARNING: To reduce the risk of injury, user must read instruction manual. Prolonged exposure to UV rays, rain and the elements may damage the enclosure materials. Store indoors when not in use. Risk of fire, no user serviceable parts. Use only with specified charger in instructions.

AVERTISSEMENT - Pour prévenir les blessures, l'utilisateur doit lire le manuel d'utilisation.
AVERTISSEMENT - Risque d'incendie -Aucune des parties ne peut être réparée par l'utilisateur
Entrez le produit à l'intérieur entre chaque utilisation. Veuillez n'utiliser qu'un chargeur
Exposition prolongée aux rayons UV, à la pluie et aux éléments endommager les matériaux encastrés, à portes fermées quand ils ne sont pas utilisés


Recycle Information

Should you need to recycle your scooter, please work with a local electronics service to have it safely dismantled and separated by material type. Do not short circuit or dismantle the battery.

Service information

Please contact customer service if your scooter needs servicing.
Phone: +1 (888) 428-3499
Email: help@unagiscooters.com



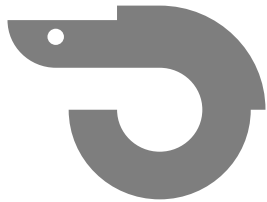

www.unagiscooters.com